


CORE EXP CLUTCH 3.0 - Honda CRF 250 R (04-09), CRF 250 X (04-09), CRF 250 X (12-13)

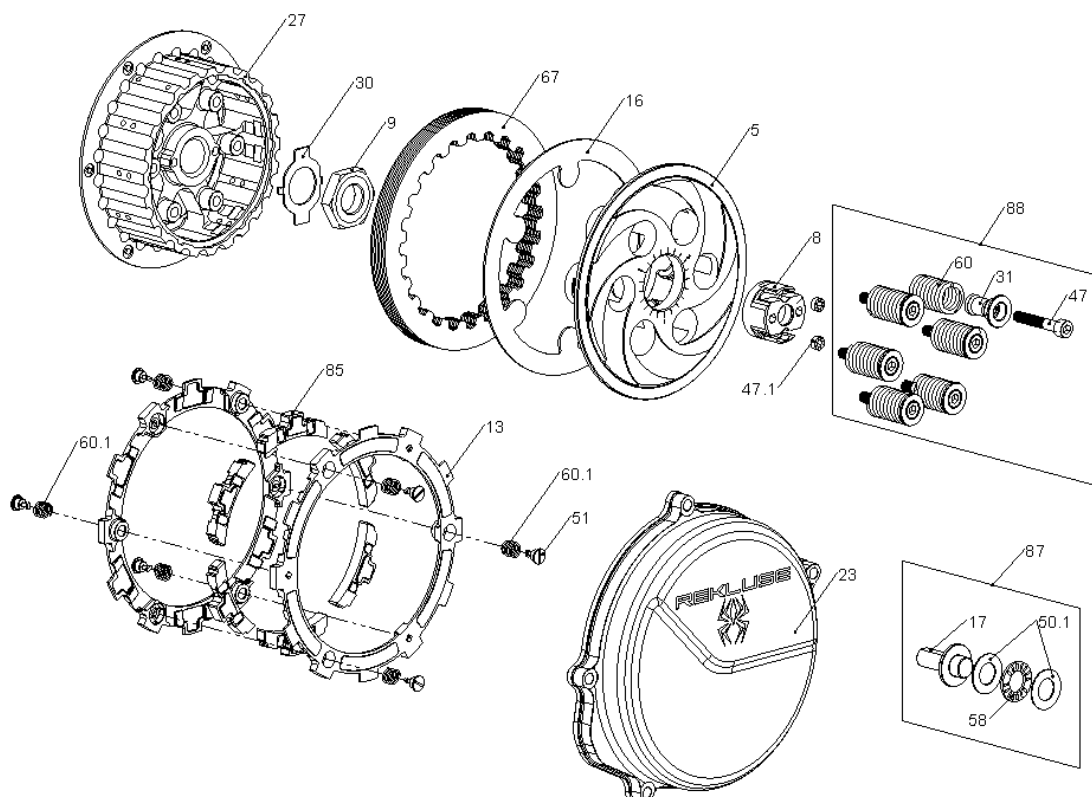

Item	Part Number	Item Description	Qty	Assembled as EXP Friction Disk
Document	191-7706A	Rekluse Core EXP Installation Guide - Cable Bikes	1	☐
Document	192-290	CUSTOMER DOCUMENT - Safety Warnings	1	☐
Document	193-707A	EXP/Core EXP - Troubleshooting Guide	1	☐
Not Shown	415-000	FASTENER - Quarter Turn Pin	2	☐
Not Shown	418-300	HARDWARE - Clutch Cover O-Ring Cord - 22	1	☐
Not Shown	419-121	HARDWARE - 0.5 Black Free Play Gain Rubber Band	1	☐
Not Shown	442-001	EXP ADJUSTMENT SPRING EXP - Light (Silver)	6	☐
Not Shown	442-003	EXP ADJUSTMENT SPRING EXP - Heavy (Blue)	3	☐
5	113-014A	PRESSURE PLATE - Core EXP 3.0 - 250 Class	1	☐
8	116-764C	PRESSURE PLATE ADJUSTER - CORE EXP - S450	1	☐
9	117-001	CENTER CLUTCH NUT - H450	1	☐
13	140-213A	EXP 3.0 BASE - H250	2	☒
16	143-018A	Lining Plate 250 Class EXP 3.0	1	☐
23	169-912B	CLUTCH COVER - H250	1	☐
27	178-009C	CENTER CLUTCH - CORE EXP/CORE MANUAL - H250	1	☐

30	183-001A	HARDWARE - Core 450 Center Clutch Tab Lock Washer	1	☐
47.1	411-136B	HARDWARE - Pipe Plug: 1/16 27 NPTF, 0.15 long, 4010 Annealed, face knurl	2	☐
51	415-000	FASTENER - Quarter Turn Pin	6	☒
60.1	442-002	EXP ADJUSTMENT SPRING EXP - Medium (Red)	6	☒
67	465-480B	DRIVE PLATE - 0.048 Core H250 Precision	8	☐
85	741-014A	EXP 3.0 WEDGE ASSEMBLY - H250 - Medium	6	☒
87	743-006	THROW-OUT ASSEMBLY - CORE EXP H250	1	☐
	195-001	CUSTOMER DOCUMENT - CORE EXP THROWOUT ASSEMBLY MANUAL	1	
17	151-012	THROW-OUT - Core EXP - H250	1	
50.1	414-130	HARDWARE - 1/2 Flat Throwout Washer	2	
58	433-302	THRUST BEARING - 1/2 Throwout Needle Thrust Bearing TC815	1	
88	744-040	CORE CLUTCH SPRING KIT - 250 - Heavy (Gold)	1	☐
31	184-101B	HARDWARE - EXP Screw Sleeve	5	
47	411-140	FASTENER - M6-1 x 35mm Thermal Black Socket Cap Screw	5	
60	442-104	PRESSURE PLATE SPRING - 250 Class Bikes Heavy Gold	5	